



MOTOROLA
intelligence everywhere™

digital dna™

Freescale Semiconductor, Inc.

HCS12 Microcontrollers

*Interrupt (INT)
Module V1*

S12INTV1/D
Rev. 1.00
5/2003

MOTOROLA.COM/SEMICONDUCTORS

PRINTED VERSIONS ARE UNCONTROLLED EXCEPT WHEN STAMPED "CONTROLLED COPY" IN RED

Revision History

| Version Number | Revision Date | Effective Date | Author | Description of Changes |
|----------------|---------------|----------------|-------------|--|
| 1.02 | 5/1/2003 | 5/1/2003 | John Langan | Creation of block user guide from core user guide version 1.5 (Oct. 12, 2001). Changes include: updating format and making end-customer friendly. Original release. |

PRINTED VERSIONS ARE UNCONTROLLED WHEN STAMPED - "CONTROLLED COPY" IN RED

Motorola and the Stylized M Logo are registered trademarks of Motorola, Inc.
DigitalDNA is a trademark of Motorola, Inc.

© Motorola, Inc., 2003

Table of Contents

Freescale Semiconductor, Inc.

PRINTED VERSIONS ARE UNCONTROLLED EXCEPT WHEN STAMPED "CONTROLLED COPY" IN RED

List of Figures

| | | |
|------------|---|----|
| Figure 1-1 | Interrupt Block Diagram | 5 |
| Figure 3-1 | Interrupt Register Summary | 11 |
| Figure 3-2 | Interrupt Test Control Register (ITCR) | 11 |
| Figure 3-3 | Interrupt TEST Registers (ITEST) | 12 |
| Figure 3-4 | Highest Priority I Interrupt Register (HPRIO) | 13 |

List of Tables

| | | |
|-----------|---|----|
| Table 4-1 | Exception Vector Map and Priority | 16 |
|-----------|---|----|

Section 1 Introduction to Interrupt (INT)

| | | |
|-------|------------------------------|---|
| 1.1 | Overview | 8 |
| 1.2 | Features | 8 |
| 1.3 | Modes of Operation | 8 |
| 1.3.1 | Normal Operation | 8 |
| 1.3.2 | Special Operation | 8 |
| 1.3.3 | Emulation Modes | 9 |
| 1.4 | Low-Power Options | 9 |
| 1.4.1 | Run Mode | 9 |
| 1.4.2 | Wait Mode | 9 |
| 1.4.3 | Stop Mode | 9 |

Section 2 External Signal Description

Section 3 Memory Map/Register Definition

| | | |
|-----|---|----|
| 3.1 | Interrupt Test Control Register | 13 |
| 3.2 | Interrupt Test Registers | 14 |
| 3.3 | Highest Priority I Interrupt (Optional) | 15 |

Section 4 Functional Description

| | | |
|-------|---|----|
| 4.1 | Interrupt Exception Requests | 17 |
| 4.1.1 | Interrupt Registers | 17 |
| 4.1.2 | Highest Priority I-Bit Maskable Interrupt | 17 |
| 4.1.3 | Interrupt Priority Decoder | 17 |

4.2 Reset Exception Requests 18
4.3 Exception Priority 18

PRINTED VERSIONS ARE UNCONTROLLED WHEN STAMPED. "CONTROLLED COPY" IN RED

Section 1 Introduction to Interrupt (INT)

This section describes the functionality of the Interrupt (INT) sub-block of the S12 Core Platform. A block diagram of the Interrupt sub-block is shown in **Figure 1-1**.

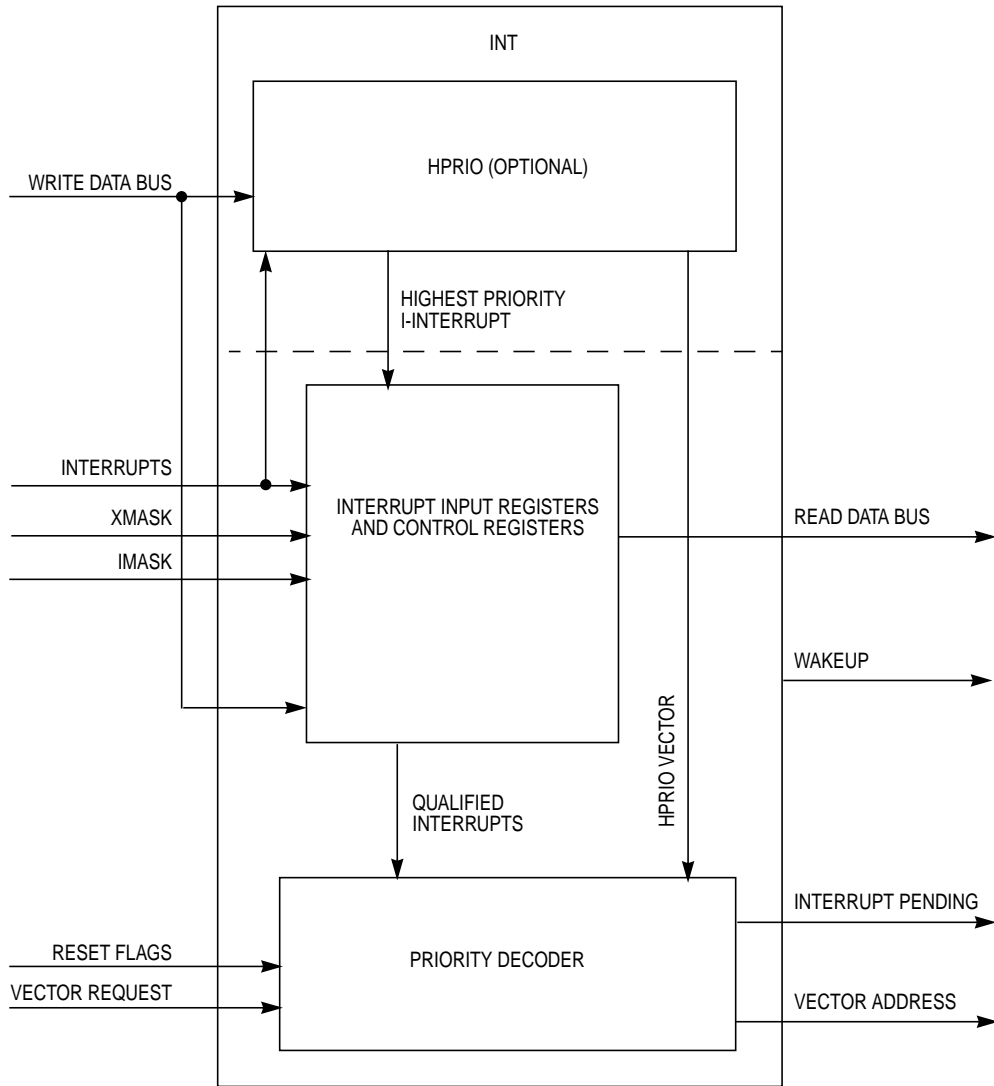


Figure 1-1 Interrupt Block Diagram

Freescale Semiconductor, Inc.

PRINTED VERSIONS ARE UNCONTROLLED EXCEPT WHEN STAMPED "CONTROLLED COPY" IN RED

1.1 Overview

The Interrupt sub-block decodes the priority of all system exception requests and provides the applicable vector for processing the exception. The INT supports I-bit maskable and X-bit maskable interrupts, a nonmaskable Unimplemented Opcode Trap, a nonmaskable software interrupt (SWI) or Background Debug Mode request, and three system reset vector requests. All interrupt related exception requests are handled by the Interrupt sub-block (INT).

1.2 Features

The INT includes these features:

- Provides two to 122 I-bit maskable interrupt vectors (\$FF00–\$FFF2)
- Provides one X-bit maskable interrupt vector (\$FFF4)
- Provides a nonmaskable software interrupt (SWI) or Background Debug Mode request vector (\$FFF6)
- Provides a nonmaskable Unimplemented Opcode Trap (TRAP) vector (\$FFF8)
- Provides three system reset vectors (\$FFFA–\$FFFE) (Reset, CMR, and COP)
- Determines the appropriate vector and drives it onto the address bus at the appropriate time
- Signals the CPU that interrupts are pending
- Provides control registers which allow testing of interrupts
- Provides additional input signals which prevents requests for servicing I and X interrupts
- Wakes the system from stop or wait mode when an appropriate interrupt occurs or whenever \overline{XIRQ} is active, even if \overline{XIRQ} is masked
- Provides asynchronous path for all I and X interrupts, (\$FF00–\$FFF4)
- (Optional) Selects and stores the highest priority I interrupt based on the value written into the HPRIO register

1.3 Modes of Operation

The functionality of the INT sub-block in various modes of operation is discussed in the subsections that follow.

1.3.1 Normal Operation

The INT operates the same in all normal modes of operation.

1.3.2 Special Operation

Interrupts may be tested in special modes through the use of the interrupt test registers.

1.3.3 Emulation Modes

The INT operates the same in emulation modes as in normal modes.

1.4 Low-Power Options

The INT does not contain any user-controlled options for reducing power consumption. The operation of the INT in low-power modes is discussed in the following subsections.

1.4.1 Run Mode

The INT does not contain any options for reducing power in run mode.

1.4.2 Wait Mode

Clocks to the INT can be shut off during system wait mode and the asynchronous interrupt path will be used to generate the wake-up signal upon recognition of a valid interrupt or any \overline{XIRQ} request.

1.4.3 Stop Mode

Clocks to the INT can be shut off during system stop mode and the asynchronous interrupt path will be used to generate the wake-up signal upon recognition of a valid interrupt or any \overline{XIRQ} request.

PRINTED VERSIONS ARE UNCONTROLLED WHEN STAMPED. "CONTROLLED COPY" IN RED

Section 2 External Signal Description

Most interfacing with the Interrupt sub-block is done within the Core. However, the Interrupt does receive direct input from the Multiplexed External Bus Interface (MEBI) sub-block of the Core for the $\overline{\text{IRQ}}$ and $\overline{\text{XIRQ}}$ pin data.

PRINTED VERSIONS ARE UNCONTROLLED WHEN STAMPED. "CONTROLLED COPY" IN RED

Section 3 Memory Map/Register Definition

A summary of the registers associated with the Interrupt sub-block is shown in **Figure 3-1**. Detailed descriptions of the registers and associated bits are given in the subsections that follow.

| Address | Name | | Bit 7 | 6 | 5 | 4 | 3 | 2 | 1 | Bit 0 |
|---------|-------|-------|-------|-------|-------|--------|-------|-------|-------|-------|
| \$0015 | ITCR | Read | 0 | 0 | 0 | WRTINT | ADR3 | ADR2 | ADR1 | ADR0 |
| | | Write | | | | | | | | |
| \$0016 | ITEST | Read | INTE | INTC | INTA | INT8 | INT6 | INT4 | INT2 | INT0 |
| | | Write | | | | | | | | |
| \$001F | HPRIO | Read | PSEL7 | PSEL6 | PSEL5 | PSEL4 | PSEL3 | PSEL2 | PSEL1 | 0 |
| | | Write | | | | | | | | |


 = Unimplemented

Figure 3-1 Interrupt Register Summary

3.1 Interrupt Test Control Register

Register address: Base + \$0015

| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|--------|---|---|---|--------|------|------|------|------|
| R | 0 | 0 | 0 | WRTINT | ADR3 | ADR2 | ADR1 | ADR0 |
| W | | | | | | | | |
| Reset: | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 |


 = Unimplemented or Reserved

Figure 3-2 Interrupt Test Control Register (ITCR)

Read: see individual bit descriptions

Write: see individual bit descriptions

Freescale Semiconductor, Inc.

PRINTED VERSIONS ARE UNCONTROLLED EXCEPT WHEN STAMPED "CONTROLLED COPY" IN RED

WRTINT — Write to the Interrupt Test Registers

Read: anytime

Write: only in special modes and with I-bit mask and X-bit mask set.

1 = Disconnect the interrupt inputs from the priority decoder and use the values written into the ITEST registers instead.

0 = Disables writes to the test registers; reads of the test registers will return the state of the interrupt inputs.

NOTE: Any interrupts which are pending at the time that WRTINT is set will remain until they are overwritten.

ADR3–ADR0 — Test Register Select Bits

Read: anytime

Write: anytime

These bits determine which test register is selected on a read or write. The hexadecimal value written here will be the same as the upper nibble of the lower byte of the vector selects. That is, an “F” written into ADR3–ADR0 will select vectors \$FFFE–\$FFF0 while a “7” written to ADR3–ADR0 will select vectors \$FF7E–\$FF70.

3.2 Interrupt Test Registers

Register address: Base + \$0016

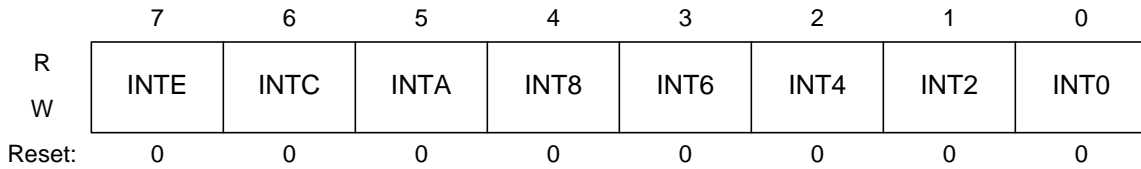


Figure 3-3 Interrupt TEST Registers (ITEST)

Read: Only in special modes. Reads will return either the state of the interrupt inputs of the Interrupt sub-block (WRTINT = 0) or the values written into the TEST registers (WRTINT = 1). Reads will always return zeroes in normal modes.

Write: Only in special modes and with WRTINT = 1 and CCR I mask = 1.

INTE–INT0 — Interrupt TEST Bits

These registers are used in special modes for testing the interrupt logic and priority independent of the system configuration. Each bit is used to force a specific interrupt vector by writing it to a logic one state. Bits are named INTE through INT0 to indicate vectors \$FFxE through \$FFx0. These bits can be written only in special modes and only with the WRTINT bit set (logic one) in the Interrupt Test Control Register (ITCR). In addition, I interrupts must be masked using the I bit in the CCR. In this

PRINTED VERSIONS ARE OBSOLETE. FREESCALE SEMICONDUCTOR'S POLICY IS TO REPLACE ALL "CONTROLLED COPY" IN RED

state, the interrupt input lines to the Interrupt sub-block will be disconnected and interrupt requests will be generated only by this register. These bits can also be read in special modes to view that an interrupt requested by a system block (such as a peripheral block) has reached the INT module.

There is a test register implemented for every 8 interrupts in the overall system. All of the test registers share the same address and are individually selected using the value stored in the ADR3–ADR0 bits of the Interrupt Test Control Register (ITCR).

NOTE: When ADR3–ADR0 have the value of \$F, only bits 2–0 in the ITEST register will be accessible. That is, vectors higher than \$FFF4 cannot be tested using the test registers and bits 7–3 will always read as a logic zero. If ADR3–ADR0 point to an unimplemented test register, writes will have no effect and reads will always return a logic zero value.

3.3 Highest Priority I Interrupt (Optional)

Register address: Base + \$001F

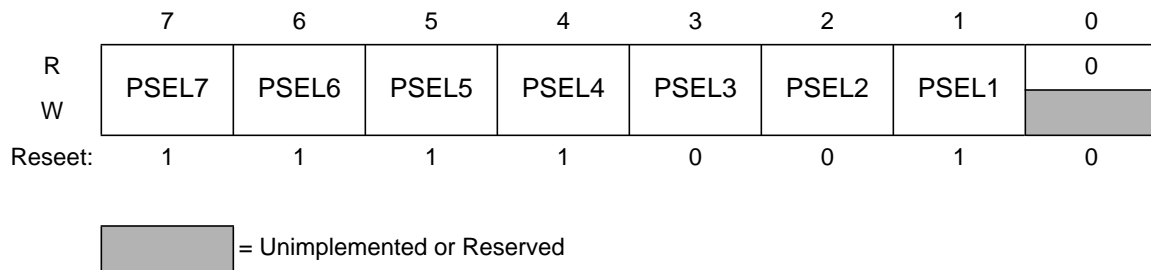


Figure 3-4 Highest Priority I Interrupt Register (HPRIO)

Read: anytime

Write: only if I mask in CCR = 1

PSEL7–PSEL1 — Highest Priority I Interrupt Select Bits

The state of these bits determines which I-bit maskable interrupt will be promoted to highest priority (of the I-bit maskable interrupts). To promote an interrupt, the user writes the least significant byte of the associated interrupt vector address to this register. If an unimplemented vector address or a non I-bit masked vector address (value higher than \$F2) is written, IRQ (\$FFF2) will be the default highest priority interrupt.

PRINTED VERSIONS ARE UNCONTROLLED WHEN STAMPED. "CONTROLLED COPY" IN RED

Section 4 Functional Description

The Interrupt sub-block processes all exception requests made by the CPU. These exceptions include interrupt vector requests and reset vector requests. Each of these exception types and their overall priority level is discussed in the subsections below.

4.1 Interrupt Exception Requests

As shown in the block diagram in [Figure 1-1](#), the INT contains a register block to provide interrupt status and control, an optional Highest Priority I Interrupt (HPRIO) block, and a priority decoder to evaluate whether pending interrupts are valid and assess their priority.

4.1.1 Interrupt Registers

The INT registers are accessible only in special modes of operation and function as described in [3.1 Interrupt Test Control Register](#) and [3.2 Interrupt Test Registers](#) previously.

4.1.2 Highest Priority I-Bit Maskable Interrupt

When the optional HPRIO block is implemented, the user is allowed to promote a single I-bit maskable interrupt to be the highest priority I interrupt. The HPRIO evaluates all interrupt exception requests and passes the HPRIO vector to the priority decoder if the highest priority I interrupt is active. RTI replaces the promoted interrupt source.

4.1.3 Interrupt Priority Decoder

The priority decoder evaluates all interrupts pending and determines their validity and priority. When the CPU requests an interrupt vector, the decoder will provide the vector for the highest priority interrupt request. Because the vector is not supplied until the CPU requests it, it is possible that a higher priority interrupt request could override the original exception that caused the CPU to request the vector. In this case, the CPU will receive the highest priority vector and the system will process this exception instead of the original request.

NOTE: *Care must be taken to ensure that all exception requests remain active until the system begins execution of the applicable service routine; otherwise, the exception request may not get processed.*

If for any reason the interrupt source is unknown (e.g., an interrupt request becomes inactive after the interrupt has been recognized but prior to the vector request), the vector address will default to that of the last valid interrupt that existed during the particular interrupt sequence. If the CPU requests an interrupt vector when there has never been a pending interrupt request, the INT will provide the Software Interrupt (SWI) vector address.

4.2 Reset Exception Requests

The INT supports three system reset exception request types: normal system reset or power-on-reset request, Crystal Monitor reset request, and COP Watchdog reset request. The type of reset exception request must be decoded by the system and the proper request made to the Core. The INT will then provide the service routine address for the type of reset requested.

4.3 Exception Priority

The priority (from highest to lowest) and address of all exception vectors issued by the INT upon request by the CPU is shown in [Table 4-1](#).

Table 4-1 Exception Vector Map and Priority

| Vector Address | Source |
|----------------|---|
| \$FFFE-\$FFFF | System reset |
| \$FFFC-\$FFFD | Crystal monitor reset |
| \$FFFA-\$FFFB | COP reset |
| \$FFF8-\$FFF9 | Unimplemented opcode trap |
| \$FFF6-\$FFF7 | Software interrupt instruction (SWI) or BDM vector request |
| \$FFF4-\$FFF5 | XIRQ signal |
| \$FFF2-\$FFF3 | IRQ signal |
| \$FFF0-\$FF00 | Device-specific I-bit maskable interrupt sources (priority in descending order) |

HOW TO REACH US:

USA/EUROPE/LOCATIONS NOT LISTED:

Motorola Literature Distribution
P.O. Box 5405
Denver, Colorado 80217
1-800-521-6274 or 480-768-2130

JAPAN:

Motorola Japan Ltd.
SPS, Technical Information Center
3-20-1, Minami-Azabu, Minato-ku
Tokyo 106-8573, Japan
81-3-3440-3569

ASIA/PACIFIC:

Motorola Semiconductors H.K. Ltd.
Silicon Harbour Centre
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
852-26668334

HOME PAGE:

<http://motorola.com/semiconductors>



Information in this document is provided solely to enable system and software implementers to use Motorola products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part.

MOTOROLA and the Stylized M Logo are registered in the US Patent and Trademark Office. All other product or service names are the property of their respective owners. Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

© Motorola Inc. 2003

S12INTV1/D
Rev. 1.00
5/2003